

How to Construct a Bait Station


Traditional T-type

Materials


- Five feet of 4-inch PVC/NDS drainage pipe
- One T-junction
- Two 4-inch to 3-inch reducers
- One end cap
- PVC tape, PVC cement, or silicon glue
- Label

Assembly

1. Cut the PVC pipe into one 2-foot section and two 1.5-foot sections.

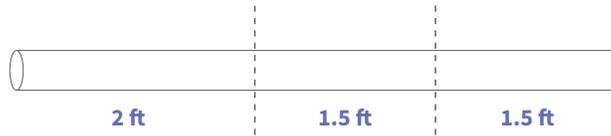


2. Attach the T-junction to the 2-foot pipe.

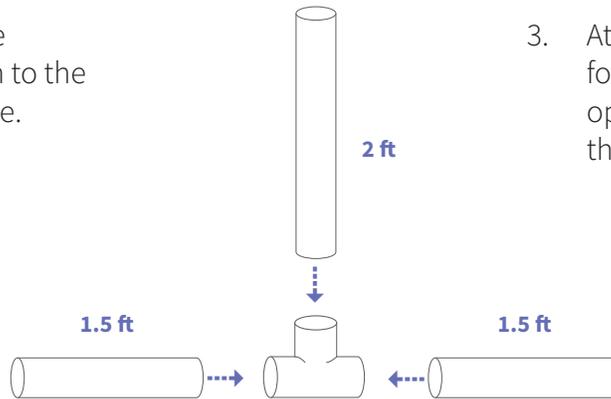

3. Attach the two 1.5-foot sections into opposite ends of the T-junction.

4. Place the reducers on the base legs (1.5-foot sections) and the end cap on top of the 2-foot section.

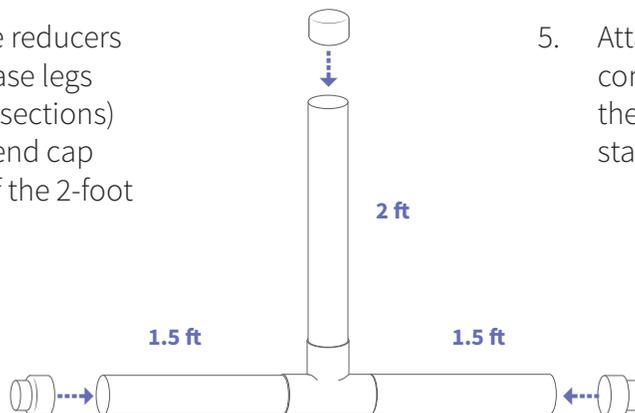

5. Attach a service container label near the top of the bait station.

